

The wireless LAN module (optional) may not be available in some countries and regions.

1. Set [WIRELESS MODULE] to [ENABLE] on the BOOT MENU.

Click the link below for instructions:


[About Administrator Menu Items and Functions in the Printer \(BOOT MENU\)](#)

2. Turn the printer off, and then unplug the power cord.


Note

Wait for at least 1 minute after unplugging the power cord, and then proceed to the next step.


3. Open the connector cover by pressing the knob (1) of the cover.

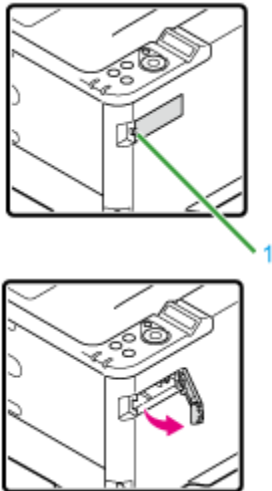

4. Connect the connector (2) of the connection cable to the wireless LAN module (3), and then install the module to the printer.

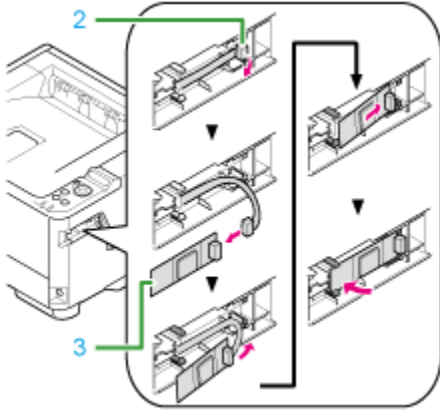

5. Put the cover back.

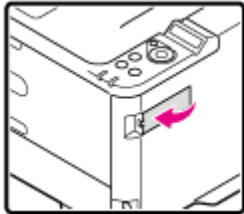

6. Power up the printer. If this is a first time setup, you should be guided through that setup automatically. After completing the setup you can view the Wireless Info menu.

7. Push the down arrow twice and machine will display "Configuration". Push OK button. Push down arrow twice until "Network" is displayed and push OK button. Push Down arrow once and "Wireless Info" will be displayed. Push OK to enter and view information.

NOTE: If you have already gone through the initial wireless setup and want to make any network changes, like connecting to a different wireless network, then you need to go into the "Wireless Setting" menu. This menu appears after enabling the wireless card in the boot menu. To get to the Wireless Setting menu, push the Up Arrow 3 times, push OK, you will be

prompted for a password which is "aaaaaa". After entering password hit OK and then proceed to set up wireless connection.