

## The activation of Wireless LAN Module (C332)

After updating the Firmware of C332 to Ver. A03.06 and installing the wireless LAN module, please activate module by following operation.

1. Press and hold the **OK** button on the operator panel while turning on the printer, and release it once **BOOT MENU** appears on the display panel.
2. Press the **OK** button.
3. Enter the Admin password. The default password is [999999].
4. Press the **up** or **down** on the operator panel to display **Wireless Module**.
5. Press the **up** button, select **Enable**, and press the **OK** button.
6. Press the **On Line** button.

### CONNECTING VIA WIRELESS LAN(INFRASTRUCTURE MODE)

To choose a valid default gateway.

1. Press **up** or **down** on the operator panel to display **ADMIN SETUP**.
2. Press the **OK** button.
3. Press **up** or **down** on the operator panel to display **NETWORK SETUP**, and then press the **OK** button.
4. Press **up** or **down** on the operator panel to display **ENABLING DEFAULT GATEWAY**, and then press the **OK** button.
5. Press **down** on the operator panel to display **WIRELESS (INFRASTRUCTURE)**, and then press the **OK** button.