

Title Installing/Configuring Wireless Card Option - C612/C712 KB Doc 92897

Product

Help ProductSelect the product(s) that this article is related to.

C612dn,C612n,C712dn

URL Name

466730AE3C677559852580A5006C9781

Publication Status

Published

Audience

Business Partners,End Users,OKI Corporate,Support Vendors

Validation Status

Validated

Article Created Date

4/30/2019 8:19 AM

KB DocNumber

92897

Counter

20

Community access

End User Information

Cause

Symptom


This document will show wireless card installation and configuration on C612/C712 models.

Resolution

- 1. Make Sure Printer is Powered OFF.** Open up the Top Cover and Front Cover of the machine. Loosen the thumb screw (red arrow) and remove the side cover:




2. Locate the connection for the Wireless Card and install card by plugging the connector into the Wireless Card:

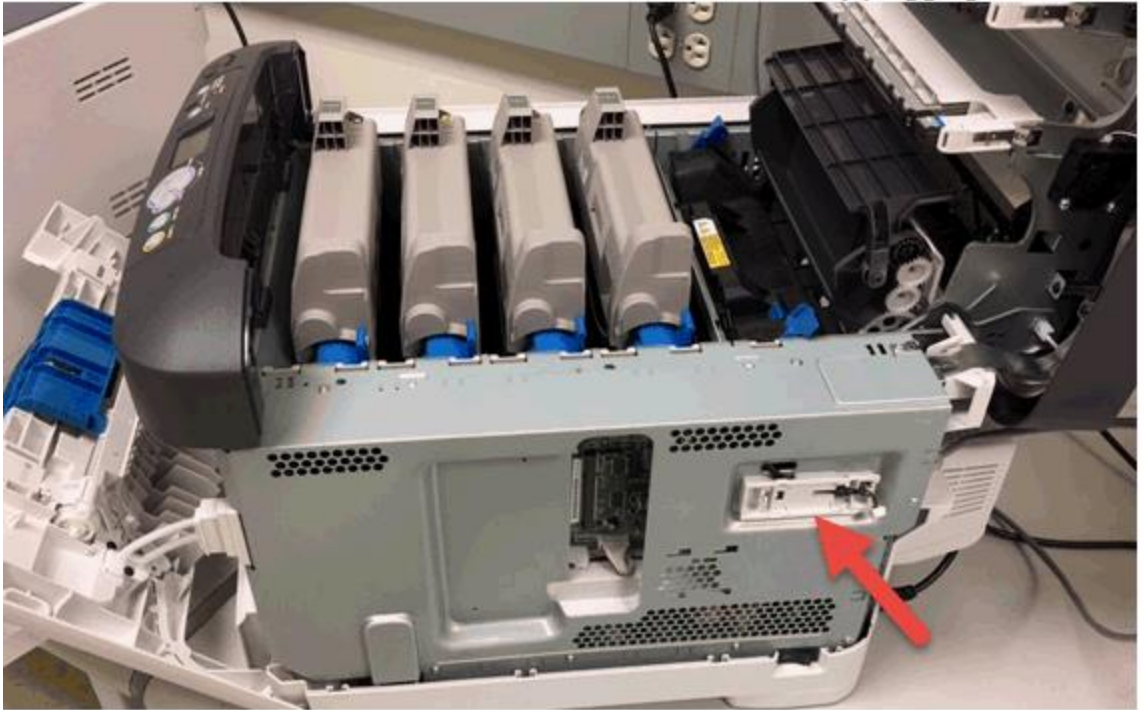

3. Finish installing the Wireless Card by clicking it into proper secured position:



4. Reattach the Side Cover. Line up the 4 plastic tabs on the bottom first and then push the top portion of the cover in for easy assembly:

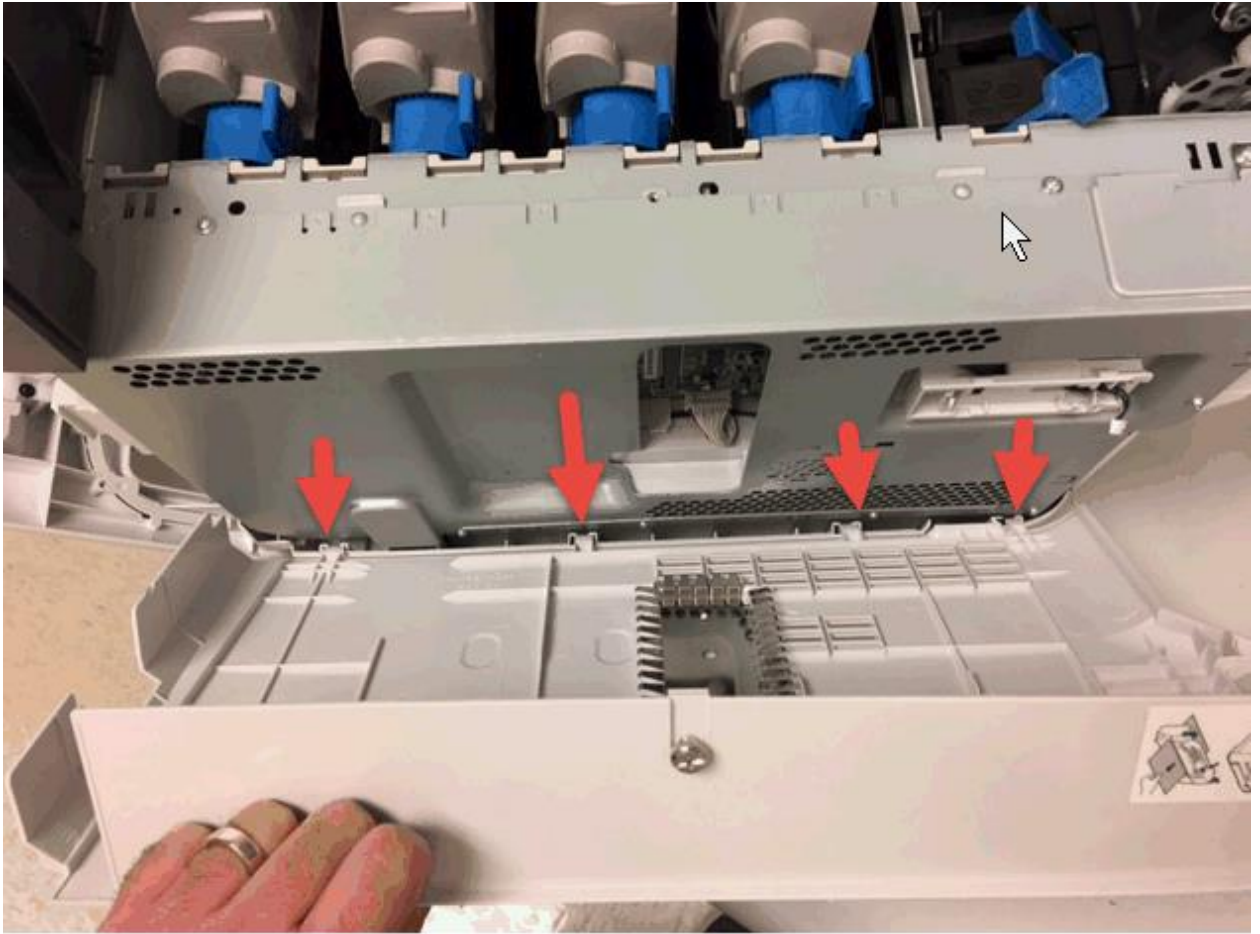



5. Tighten thumb screw and close Top Cover and Front Cover.



6. Power on the printer while holding down the Enter button. Wait until you see "Boot

Menu" displayed on the front panel of the printer and push enter.

7. You will be prompted to enter a password. The default password is 999999

8. Arrow down to "Wireless Module" and push enter.

9. Highlight "Enable" and push enter. Then push the back button and then the On Line button and the printer will display "Initializing". This may take a few minutes.

10. Once the printer says "Ready To Print" push the Menu Up Arrow until "Wireless (Infrastructure) Setting" is highlighted and push Enter. You will be prompted for the password again. Default password is 999999.

11. The screen will then say that you cant use Wireless AP mode at the same time. This is fine. Highlight the "Enable" option and push enter.

12. Push the Menu Down Arrow to "Auto Setup WPS" or to "Wireless Network Selection" and then push enter and follow the prompts to complete the Network Setup. Most customers will use the "Wireless Network Selection" option as this will go out and scan for available wireless networks.

The customer will then select the desired network and enter the appropriate security information if applicable.

13. After the network setup has completed the machine will say "wait a moment Network Initializing".

This could take a couple of minutes and after it has completed the printer should be connected and ready to print.