

Article Record Type	Article Number	Last Modified Date	Version Number
FAQ	000003712	5/7/2019 9:14 AM	1
	KB DocNumber	Article Created Date	
	92902	4/30/2019 8:19 AM	

Product: MC363dn,MC573dn,C332dn,C532dn

Symptom: After physically installing the Wireless Lan Module, it must be activated in the printers menu.

There are four related sections for this article for your reference. Please review.

The activation of Wireless LAN Module (C332)

After updating the Firmware of C332 to Ver. A03.06 and installing the wireless LAN module, please activate module by following operation.

1. Press and hold the **OK** button on the operator panel while turning on the printer and release it once **BOOT MENU** appears on the display panel.
2. Press the **OK** button.
3. Enter the Admin password. The default password is [999999].
4. Press the **up** or **down** on the operator panel to display **Wireless Module**.
5. Press the **up** button, select **Enable**, and press the **OK** button.
6. Press the **On Line** button.

CONNECTING VIA WIRELESS LAN(INFRASTRUCTURE MODE)

To choose a valid default gateway.

1. Press **up** or **down** on the operator panel to display **ADMIN SETUP**.
2. Press the **OK** button.
3. Press **up** or **down** on the operator panel to display **NETWORK SETUP**, and then press the **OK** button.
4. Press **up** or **down** on the operator panel to display **ENABLING DEFAULT GATEWAY**, and then press the **OK** button.
5. Press **down** on the operator panel to display **WIRELESS (INFRASTRUCTURE)**, and then press the **OK** button.

The activation of Wireless LAN Module (C532)

After installing the wireless LAN module, please activate wireless module by following operation.

1. Press the Menu Up or Down button on the control panel until **Setting** is highlighted and press the **OK** button.
2. Press the up or down button on the control panel to display **Admin Setup**, and press the OK button.
3. Enter the Admin password. The default password is [999999].
4. Press the up or down button on the control panel to display **User Install**, and press the OK button.
5. Press the up or down button on the control panel to display **Wireless Module**, and press the OK button.
6. Press the up button, select **Enable**, and press the **OK** button.
7. Press the Back button until the panel screen returns to initial screen.
8. Switch off the printer.

The activation of Wireless LAN Module (MC363)

After installing the wireless LAN module, please activate wireless module by following operation.

1. Press the **SETTING** button on the control panel.
2. Press the **up** or **down** button on the control panel to display **Admin Setup**, and press the **OK** button.
3. Enter the Admin password. The default password is [9999999].
4. Press the **up** or **down** button on the control panel to display **User Install**, and press the **OK** button.
5. Press the **up** or **down** button on the control panel to display **Wireless Module**, and press the **OK** button.
6. Press the **up** button, select **Enable**, and press the **OK** button.
7. Press the **Back** button until the panel screen returns to initial screen
(Copy screen).
8. Switch off the MFP.

The activation of Wireless LAN Module (MC573/ES5473 MFP)

After installing the wireless LAN module, please activate wireless module by following operation.

1. Press **Device Settings** on Home screen.
2. Press the **down** button, and press **Admin Setup**.
3. Enter the Admin password. The default password is [999999], then press **OK**. (Return to login screen.)
4. Press **OK**.
5. Press the **down** button on the operator panel to display **User Install**.
6. Press the **down** button, and press **Wireless Module**.
7. Press **Enable**.
8. Press the **Home** button on the operator panel. (Return to Home Screen)
9. Switch off the MFP.